



# Therming - (INSIDE-OUT-TURNING) AN Ornament.

① start out with square stock -  $\frac{1}{2}$ " square,  $\frac{3}{4}$ " square, 1" square or larger??  
at least 3" in length - 7" is ideal

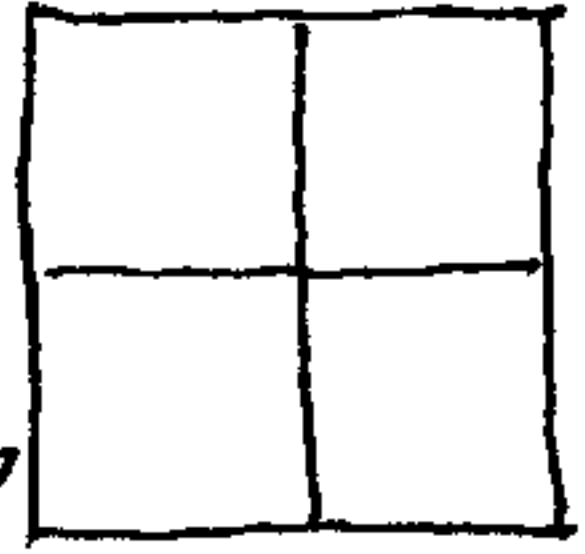


② figure what face on 4 pieces is going to be the outside of the ornament  
the 4 pieces together make a larger Sq.  
Looking down from top


③ now number the ends  
as seen →

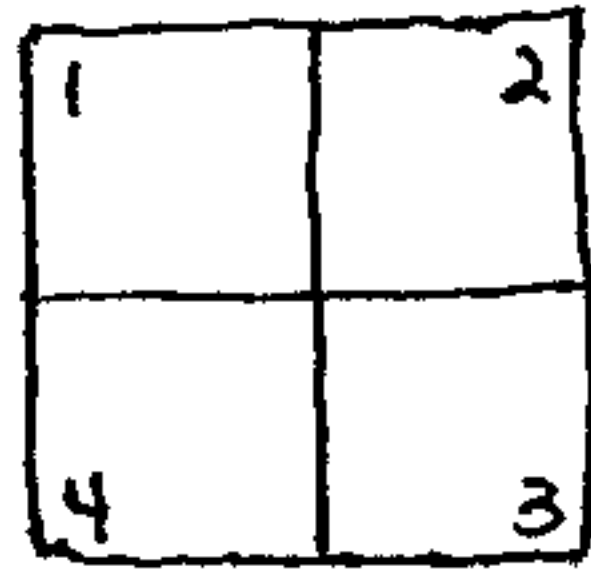


④ then put arrows  
pointing toward center

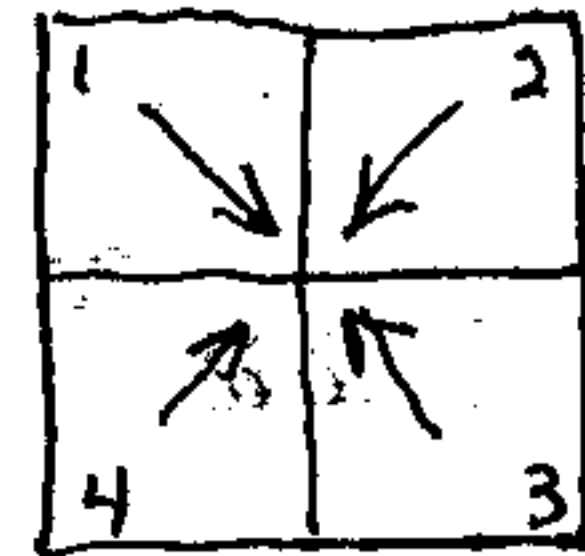


⑤ now take the squares and rotate each piece so that they  
look like this

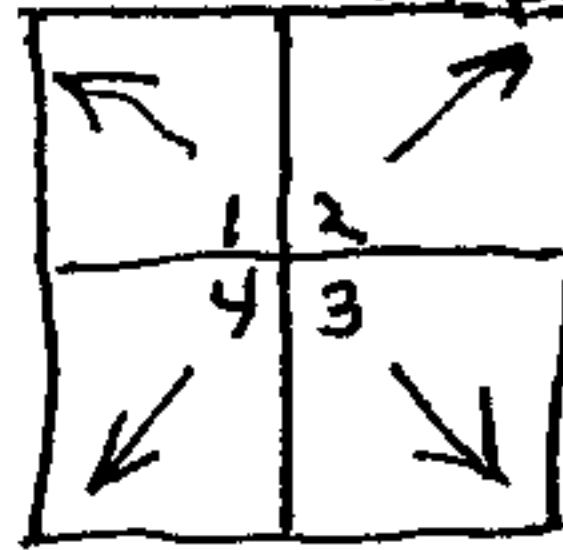

⑥ now tape the top end and bottom  
ends

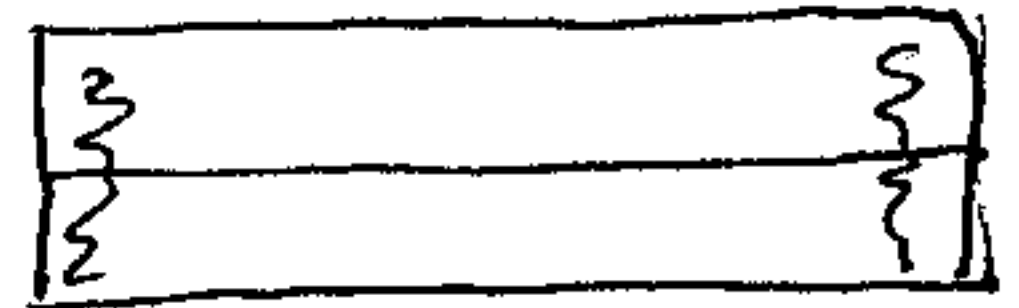


⑦ now mount on lathe between center or w/chuck  
(mount as for spindle turning)

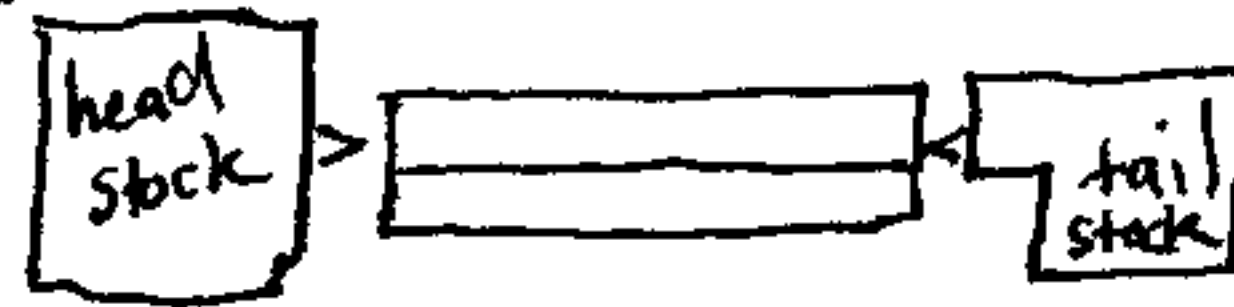

⑧ now begin turning what will be the inside of the ornament until you have the shape  
you want

⑨ before you take off the lathe - sand, and either paint and/or finish the parts  
you just turned

⑩ take off the lathe and take off tape - then orient the pieces  
glue together - now you have the outside of the  
ornament on the outside - clamp and let dry

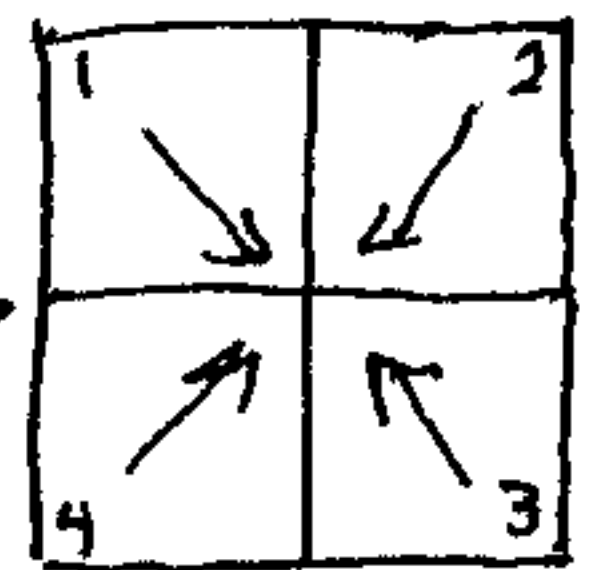

⑪ remount on lathe and turn the outside -

you can turn finials, or coves and bead at either end -  
turn as thin walled as possible, when satisfied with shape - apply paint and/or  
finish

you may have to take a sharp knife and clean up the feathering that  
appears in the open spaces - part off or otherwise finish - add a screw eye  
at the top and your done.

